



### **15mm & 20mm ProClamp Tool Adjustment Instructions**

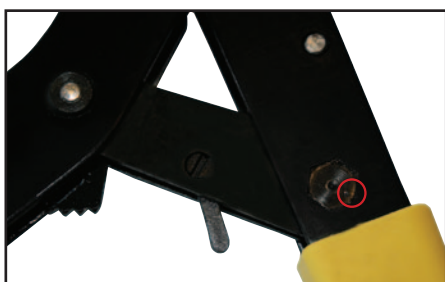


1. Identify the position of the adjuster cam by locating the dot on the hexagonal end of the cam.

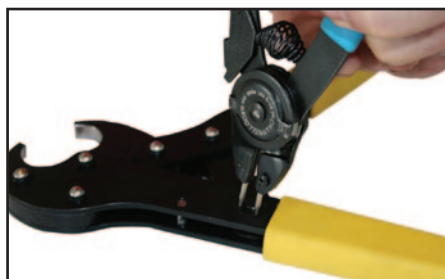

2. Turn the tool over and remove the circlip securing the adjuster cam.



3. Retain the circlip for replacement after adjustment.

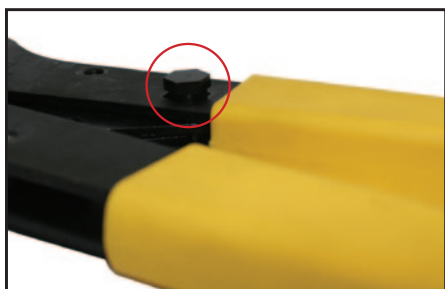

4. Push the adjuster cam out from the circlip side until the hexagon head of the cam disengages from the handle, and turn the cam anticlockwise, so that it is moved around 1 flat of the hexagon.

5. Push the hexagonal head of the cam back into the handle and replace the circlip to retain the adjuster cam.

*NOTE: The maximum adjustment is achieved when the adjusting cam is rotated 180°.*

#### **BUTELINE NZ LTD**

29 Lady Ruby Drive, East Tamaki, Auckland, New Zealand  
PO Box 204308, Highbrook, Auckland 2161, New Zealand  
Phone (09) 273 5800, Fax (09) 273 5808  
Email [sales@buteline.co.nz](mailto:sales@buteline.co.nz)

**0800 BUTELINE**  
**[www.buteline.com](http://www.buteline.com)**