

28mm Clamp Tool Adjustment Instructions




1. Remove the screw and the locking plate.



2. Rotate the adjuster in the direction of the arrow shown on the plate by 1 notch.



3. Replace the locking plate and the screw.

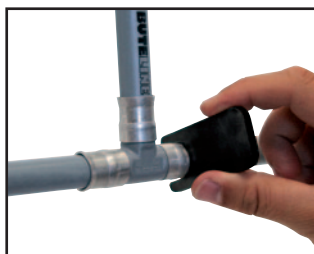

4. Check for correct clamp width.

BUTELINE NZ LTD

29 Lady Ruby Drive, East Tamaki, Auckland, New Zealand
PO Box 204308, Highbrook, Auckland 2161, New Zealand
Phone (09) 273 5800, Fax (09) 273 5808
Email sales@buteline.co.nz

0800 BUTELINE
www.buteline.com