


## BUTE Brazing Tails

### Assembly & Installation Instructions

1. Remove BUTE clamp ring from brass body.
2. Braze the tail onto the copper pipe, using suitable flux and SilFos.
3. Ensure no residual flux remains on the tail section.
4. Let it cool completely.
5. Push the BUTE clamp ring back onto the tail with force until flush to the positioning shoulder (as shown below).

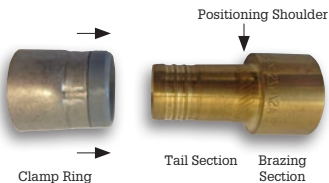

**Complete**



For more information, please refer to the Buteline Plumbers Manual or call **0800 BUTELINE**.