



## INSTALLATION INSTRUCTIONS Telescopic Nog Brackets for BUTE-1, BUTE-1EX or Lugged Elbows




1

**To assemble:** Bend the end tabs on the bracket

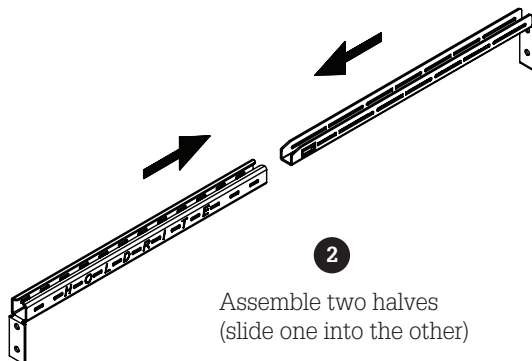


2

Assemble two halves (slide one into the other)

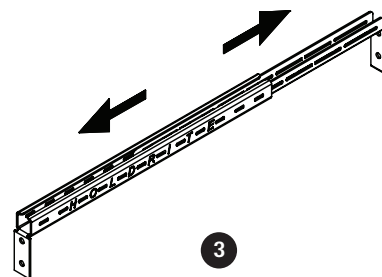


3

Telescope bracket to the desired length for the wall stud

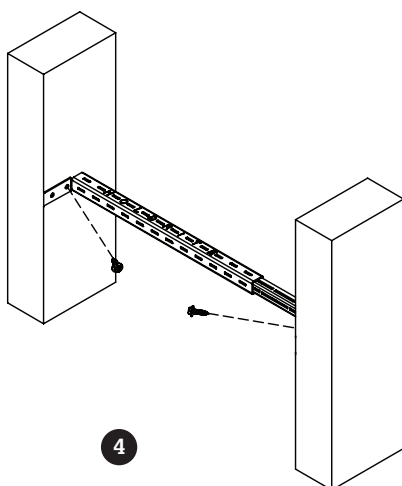

4

Mount bracket to framing with screws at each end (recommended screw locations shown)

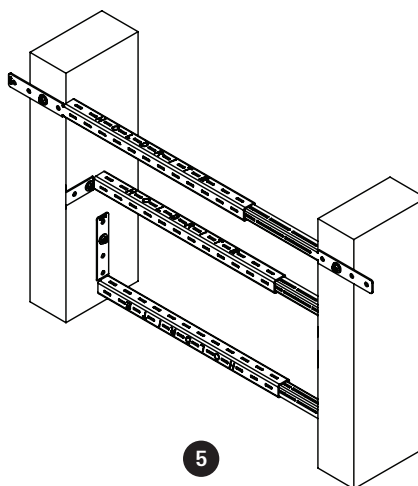

5

Ready for attachment of BUTE-1 Adjustable Male Wall Elbow or Buteline Lugged Elbow (BLE70 or BLE100)



Product Code	Description	Stud Width Spacing
BK1	Telescopic Galvanized Steel Bracket	250mm to 400mm
BK2	Telescopic Galvanized Steel Bracket	330mm to 610mm

1. Cut off any excess tabs or fold around stud.
2. Use appropriate industry standard hardware such as sheet metal screws or dry wall screws.
3. Failure to observe these instructions may lead to unsatisfactory product performance, which can result in property damage or bodily injury.

### SAFETY INSTRUCTIONS:

Be mindful when adjusting the nogs to ensure hands are clear.

### BUTELINE NZ LTD

29 Lady Ruby Drive, East Tamaki, Auckland, New Zealand  
PO Box 204308, Highbrook, Auckland 2161, New Zealand  
Phone (09) 273 5800, Fax (09) 273 5808  
Email [sales@buteline.co.nz](mailto:sales@buteline.co.nz)

0800 BUTELINE

[www.buteline.com](http://www.buteline.com)

