

Bute-1 Installation Guide


Pipe Out Stage





1. Cut 15mm deep slots into the full width of the timber studs with a wide saw blade (eg: wall board saw, reciprocating saw or circular saw).



If installing the Bute-1 in metal framing, use the Bute-1 Metal Framing Fixing Angle Bracket.

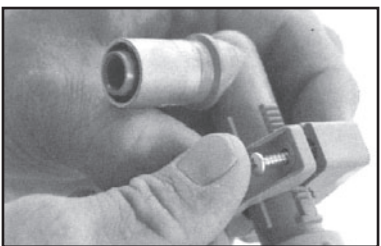


2. Assemble the Bute-1 by following the instructions enclosed in the box, clicking it together and then pushing the supplied screws through the holes to hold the assembly together. Then screw the assembled fitting to the angle brace.

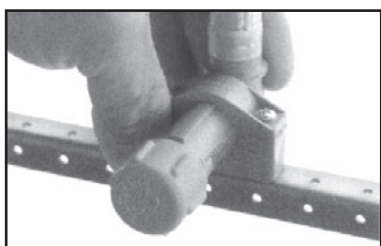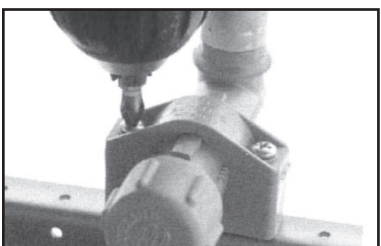

3. Tighten (nip) the Bute self-sealing protective test cap with the Bute palm spanner supplied. (No washers or thread tape etc. required). Fit pipe and clamp.
4. Pull the Bute-1 fitting into the fully forward position.

Fit Off Stage

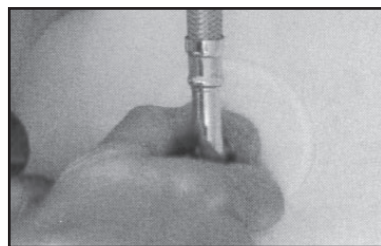

1. Remove the Bute self-sealing protective test cap with the Bute palm spanner and drain.
2. Fit wall flange (if necessary) and then connect the appropriate fitting and do not overtighten.
3. Push back the Bute-1 until contact is made with the wall lining.

BUTELINE NZ LTD

29 Lady Ruby Drive, East Tamaki, Auckland, New Zealand
PO Box 204308, Highbrook, Auckland 2161, New Zealand
Phone (09) 273 5800, Fax (09) 273 5808
Email sales@buteline.co.nz

0800 BUTELINE
www.buteline.com