

Drainage made simpler.



Reln Rain Drain in 3m and 1m lengths. 3m lengths mean less work, fewer joins, less cost. Easy to install.

End Cap finishes off end of drain or connects to 90mm stormwater pipe.

The quick easy way to create 90° corners.


Corner clip makes 90° corners or "T" piece connections.

Range of fashionable colours – Black, Terracotta, Heritage Green, Portland Grey, Sandstone and Galvanised Steel.

Hold down feet stop movement once concrete sets.



Feet also prevent flotation during concrete pour.

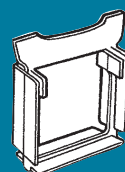


FREE joiner allows easy joining of lengths and reuse of offcuts to avoid waste.



Reln Rain Drain withstands 5 tonne vehicle without moving in the concrete.


RELN RAIN DRAIN

Use this simple Rain Drain system

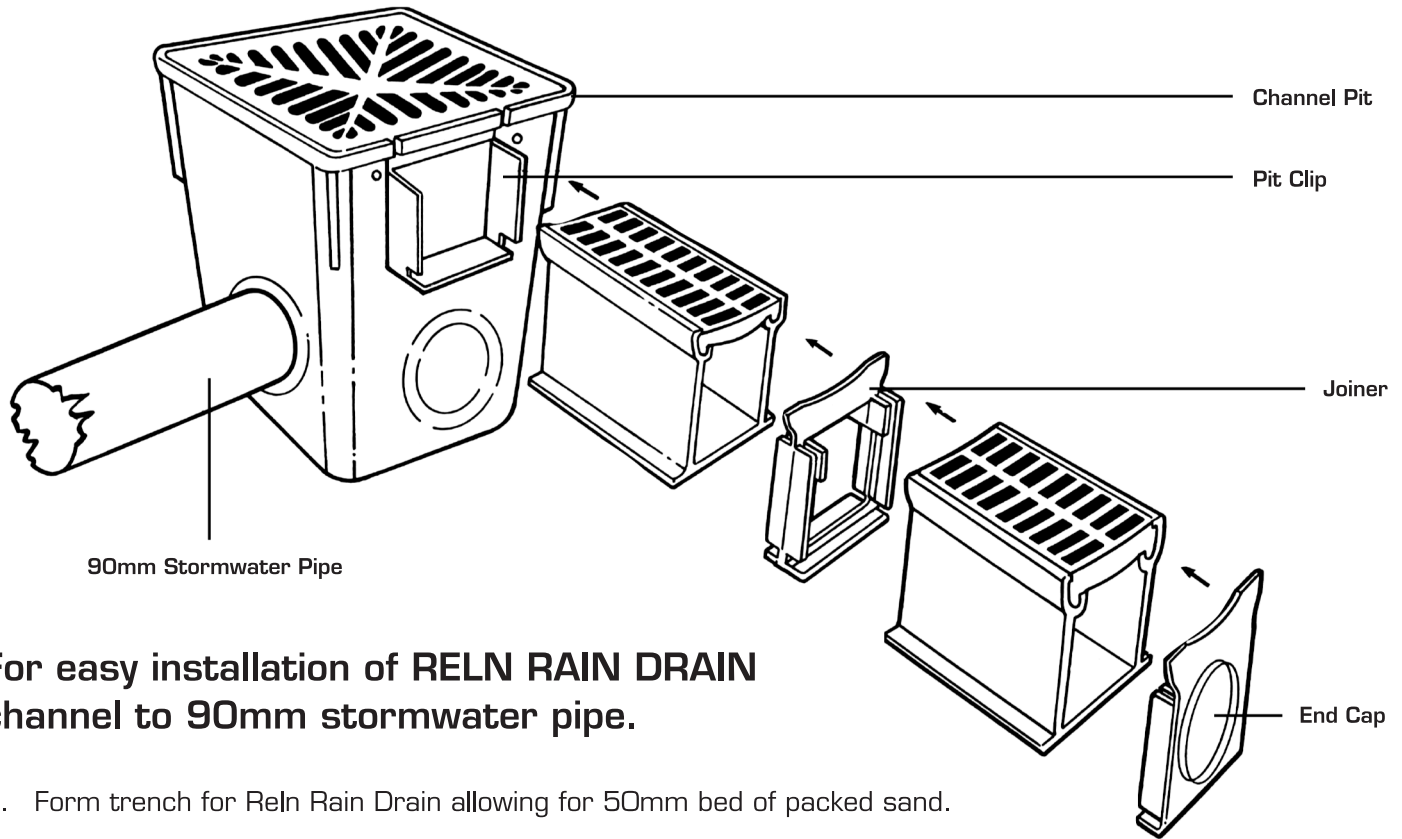

For easy installation of RELN RAIN DRAIN channel to 90mm stormwater pipe.

1. Form trench for Reln Rain Drain allowing for 50mm bed of packed sand.
2. Allow slope of approximately 15mm every 1 metre.
3. Join lengths with free Joiner supplied.
4. Use End Cap at highest end of installation.
5. At lowest end use Pit Clip to join channel to Channel Pit which connects to the stormwater pipe to clear away water.
6. Seal joints with silicone.
7. Use Reln Leafguard inside the Channel Pit to collect debris.
8. Install with grate fitted. Protect grate from concrete splash with masking tape.
9. Pour concrete to fill trench on each side of the Rain Drain channel. For efficient water flow into grates, set grates 2mm below concrete or paver surface.
10. Allow 72 hours cure before vehicle use. Remove tape from grates.

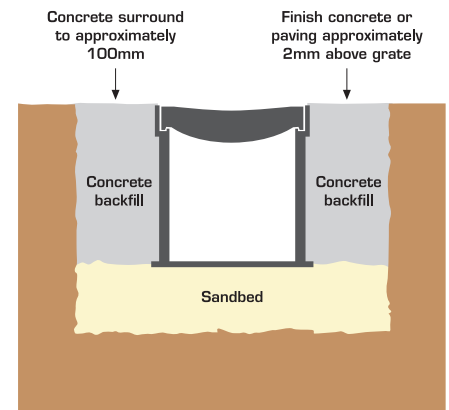

RELN RAIN DRAIN

Note: The Reln Rain Drain range is subject to intellectual property protection.

