

## Energysaver® 309FT, 559FT, and 561FT back spacer kit installation guide

Before installation check for damage (do not install any damaged items), check all components have been supplied, and read these instructions to get an overview of the steps required before starting.


### Suitable for:

- **ESBSKE**  
Energysaver back spacer kit RHFE-309FT
- **ESBSKF**  
Energysaver back spacer kit RHFE-559FT
- **ESBSKG**  
Energysaver back spacer kit RHFE-561FT

The back spacer kits (also referred to as back cover kits) cover the flue elbow connection and provide the required clearances from the heater and wall in underfloor, and front-of-wall horizontal flueing installations.



Underfloor installation


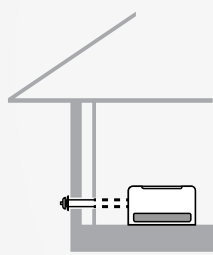


Front-of-wall horizontal installation

### Back spacer kit contents

- Left spacer panel
- Right spacer panel
- Top spacer panel
- Flue elbow connection
- Plastic edging seal

The plastic edging seal is used to provide a protective edge around the flue pipe cutout in the side spacer panel (front-of-wall horizontal flue installations only).

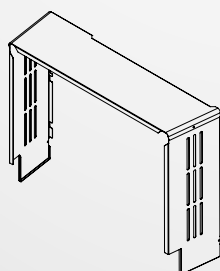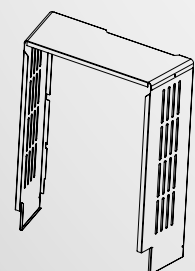

### Back spacer kit assembly

The back spacer kits are used **instead** of the rear panels supplied with each Energysaver. The screws and wall brackets provided with the heater are required for assembly—do not discard these items.

When replacing the rear panels supplied with the heater, the back spacer kit adds approximately 115 mm of additional depth (standard rear panel ≈ 85 mm, back spacer panel ≈ 200 mm).



309FT Energysaver model with standard rear panels



Older 557FTR Energysaver with back spacer kit

Installation will be the same as the rear panels—refer to the instructions provided with the Energysaver unit, and follow the instructions in the section titled 'Heater Installation'.



Experience our innovation

---

**Rinnai.co.nz | 0800 746 624**

<http://www.youtube.com/rinnainz>